

## 14.4 Firmware Update


The manufacturer periodically release instruments firmware updates aiming to correct any mistakes, improve the instruments performances or add new features.

The update can be performed by the user following the instructions below.

**WARNING:**  
Check if the latest “Seitron Smart Analysis” PC software is installed on your computer.

### Instructions for updating the combustion analyzer with a new firmware:

1. Turn on the instrument and wait for the end of the autozero.
2. Connect the analyzer to the PC with the USB cable.
3. Go to the web site [www.seitronamericas.com](http://www.seitronamericas.com) and download the firmware file which can be found in the “Download - Analyzer firmware” section. This file is in a compressed version with the .zip extension.
4. Open the compressed folder with .zip extension.
5. Double-click on the file novoupdater.exe; the software is started.
6. Click on “Start Update”.
7. The instrument is automatically restarted and displays the following screen:

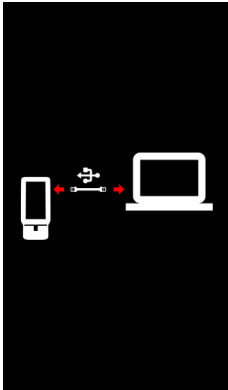

8. The instrument displays the home page; the analyzer is up to date: it can be turned off and disconnected from the PC.